


DP-VV-xxU/150


DP-VV-xxU/300

DP-VV-xxU/150 DP-VV-xxU/300

DP-VV (U)	1	2	3	4
15-33	4	4	4	4
36	4	6	6	6
42-48	4	8	8	8

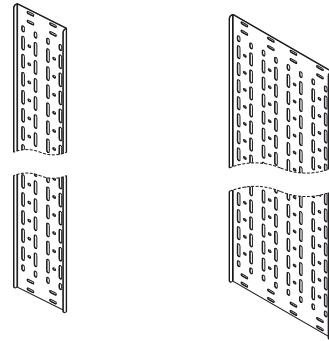


RSL use 1,3,4

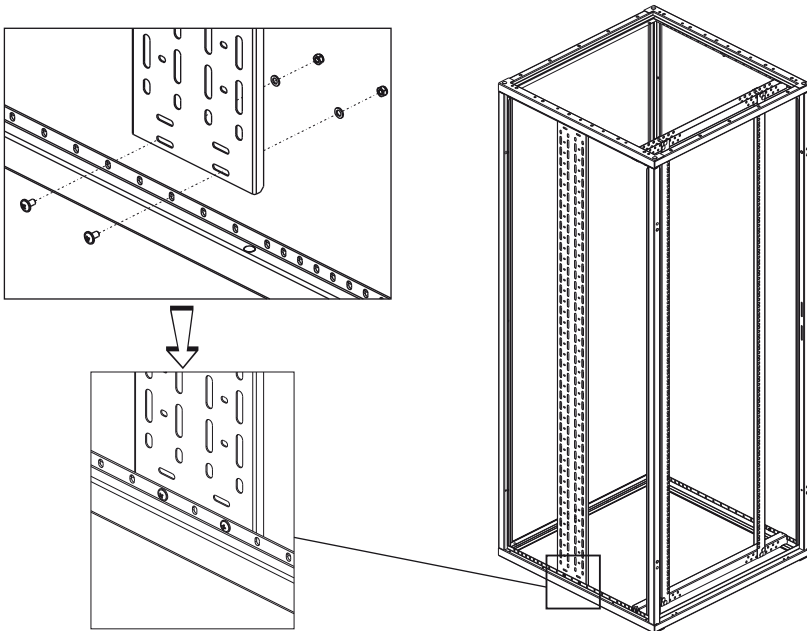


ROF/ROS (HVE)
RE V (HVMS-H)

use 2,3,4

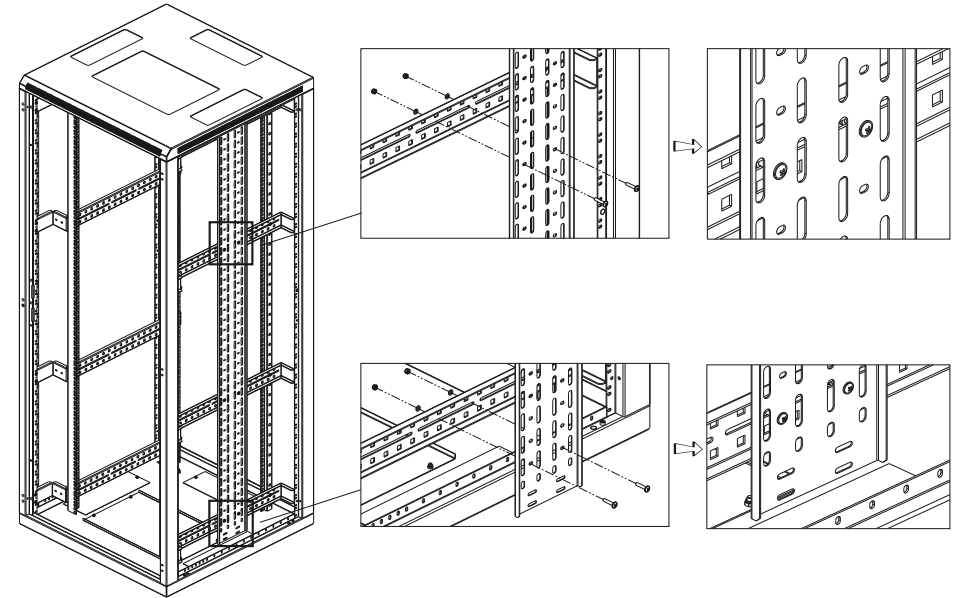

ROF/ROS (FRAME)

use 1,3,4

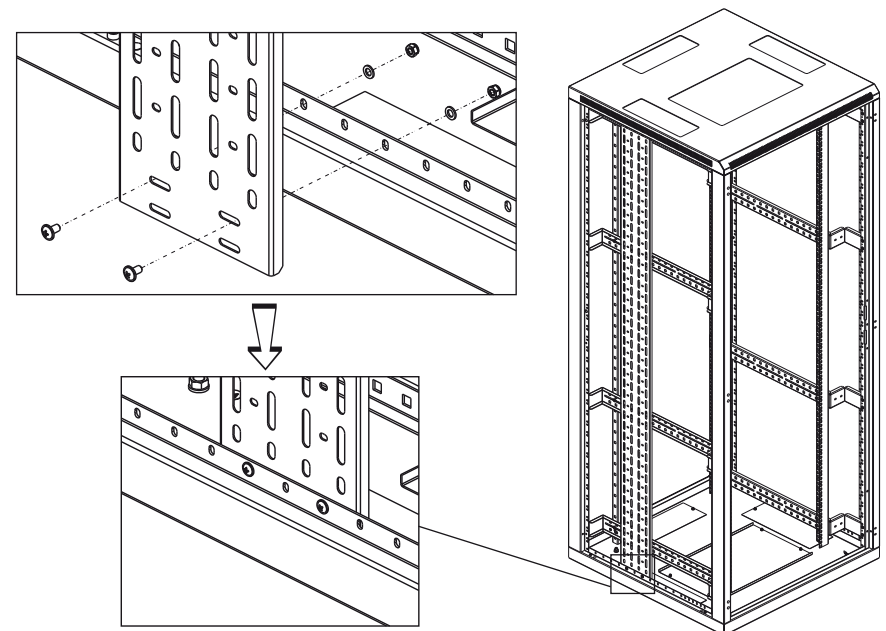

980 032 REV. B